

sewoo

Aroot Co., Ltd.

28-6, Gajangsaneopdong-ro, Osan-si, Gyeonggi-do, 18103, Republic of Korea
TEL +82-31-8077-5000 / FAX +82-31-624-5310 / <http://www.miniprinter.com>



MOBILE PRINTER
MODEL : LK-P24

USER'S MANUAL

**This device complies with part 15 of the FCC Rules.
Operation is subject to the following two conditions.**

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

Tim Kloeker

19700 S Vermont Ave Ste 200 Torrance, CA 90502 | USA
NA_Sales@miniprinter.com

Victor Almazan

Paseo de la Reforma No. 265 Piso 2.Oficina SBC. Col.
Cuauhtémoc, C.P. 06500 Ciudad de Mexico | Mexico
LA_Sales@miniprinter.com

Use of the Made for Apple badge means that an accessory has been designed to connect specifically to the Apple product(s) identified in the badge, and has been certified by the developer to meet Apple performance standards.

Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.



**Risk of explosion if battery is replaced by an incorrectly type.
Dispose of used battery according to the local disposal instructions.**



Disposal of Old Electrical&Electronic Equipment(Applicable in the European Union and other European countries with separate collection systems)

This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronics equipment. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Table of Contents

1. Safety Precautions	2
2. Unpacking	4
3. Product Overview	5
4. AMC(Advanced Manual Cutter) BUTTON	6
5. Usage and Installation	7
5-1. Control Panel Usage	7
5-2. Battery Installation	8
5-3. Charging Battery	9
5-4. Charging Cradle (Optional)	10
5-5. Set Cradle Usage (Optional)	11
5-6. Battery Removal	12
5-7. Paper Roll Installation	13
5-8. Belt Clip & Strap	14
5-9. Belt clip Usage (Optional)	16
5-10. Leather Case Usage (Optional)	17

5-11. Self Test	18
6. Peripheral Connection	20
6-1. Bluetooth Connection (Optional)	20
6-2. Wi-Fi Connection (Optional)	20
6-3. NFC Connection (Optional)	21
6-4. Interface Cable Connection	22
7. Cleaning the Printer	23
8. JAM Error	24
9. Roll Media Specification	25
10. Black Mark	26
11. Printer Specification	27
12. Utilities	29
13. S/W	30

1. Safety Precautions

For better safety and reliability, adhere to the following precautionary measures.
Read and follow the instructions carefully before operation of the product.

Indication



Prohibition



Must follow



Do not disassemble



Unplug the power from the outlet



Grounding to prevent electric shock



Do not handle the product with wet hands



WARNING

Failure to follow these instructions could result in fire, electric shock, other injuries, or property damage.




Do not pull or touch the power plug with wet hands.

Potential risk of electric shock or fire



Do not bend the wire and do not allow the wire to be pinched or crushed by heavy objects.

Potential risk of electric shock or fire



Do not overload an electrical outlet.

Potential risk of electric shock or fire



If a power plug is broken or a plug is cut or worn, do not use it.

Potential risk of electric shock or fire





WARNING

Failure to follow these instructions could result in fire, electric shock, other injuries, or property damage.



Do not unplug the power cable to turn off the product.

Turn off the power using the power button



Do not disassemble, repair or modify the product.

Potential risk of malfunction, electric shock, or fire. When the product needs to be repaired, please contact your reseller



CAUTION

Failure to follow these instructions could result in fire, electric shock, other injuries, or property damage.



Do not install the product on an unstable or inclined surface.

May cause damage or injury




If the product needs to be repaired, please contact your reseller.

Potential risk of fire or unit malfunction



Keep product away from the water and other material.

Potential risk of fire or unit malfunction



Avoid excessive shock or drops.

Potential risk of fire or property damage




2. Unpacking


Standard




Printer




Battery




Belt Strap+Bracket




Quick Manual



Charger



USB Cable



Roll paper


Optional



Set Cradle
(Charging Cradle)




Leather Case




Belt Clip



AC Cord




Adaptor




Shoulder Strap

3. Product overview

Front

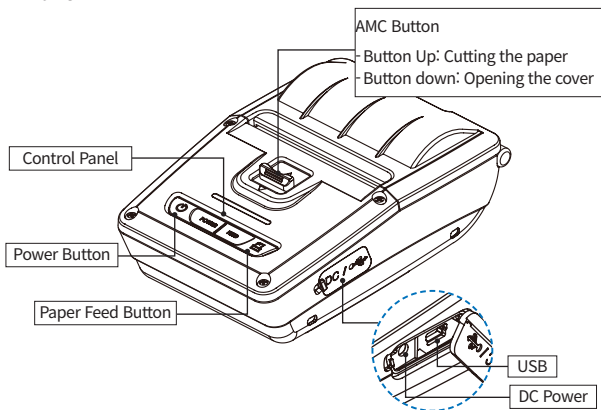



Bottom

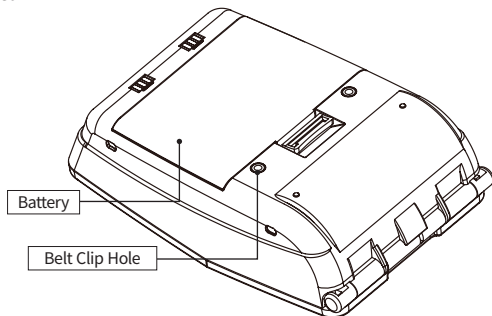

4. AMC(Advanced Manual Cutter) BUTTON


AMC function gives the convenient way for users to cut papers.

AMC Button

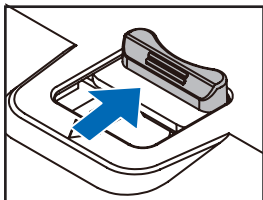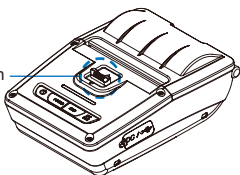

Button Up


Press the button up to cut the paper.

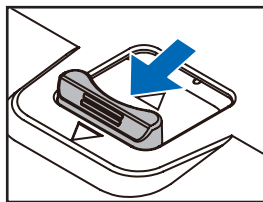

Button Down

Press the button down to open the cover.

Please press the button down and open the cover in situations such as cleaning the head, replacing a paper, and having a paper jam error.

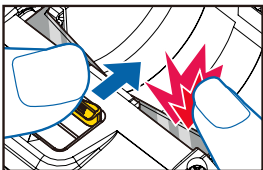


CAUTION

Please stay your fingers away from the printer head after pressing up the AMC button with cover open.

There is the risk of finger injury due to a projecting cutter blade.


5. Usage and Installation

5-1. Control Panel Usage

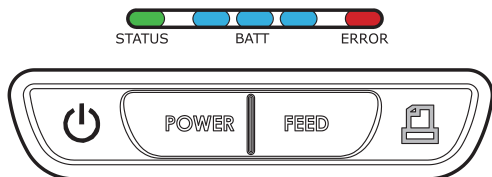

Button	Name	function
	Power Button	- This button is used to turn the printer on and off. - When the printer is off, press this button for approximately 3 seconds and the printer will power on. When you press this button while the printer is powered on, the printer will turn off.
	Paper Feed Button	- This button can be used to manually feed the paper. - Additionally, this button is also used to initiate self-tests and Hexadecimal Dumping. 01 Refer to the Self Test section of this manual for information regarding self-tests. 02 Refer to the Note in Self Test section of this manual for information regarding Hexadecimal Dumping.
 BATT	Battery Status Lamp	- If the Batt LED is lit, the battery is fully charged. - If you can hear a beeping sound and LED light is turned off, the battery is at the lowest level. - If the battery is not charged at all, the printer turns off automatically.
 ERROR	Error Lamp	- If the red light is turned on, there is no paper or the paper cover is open.
 STATUS	LINK/ Power Light	- LINK: LED BLINK - POWER ON: GREEN LED ON - POWER OFF: LED OFF

5-2. Battery Installation

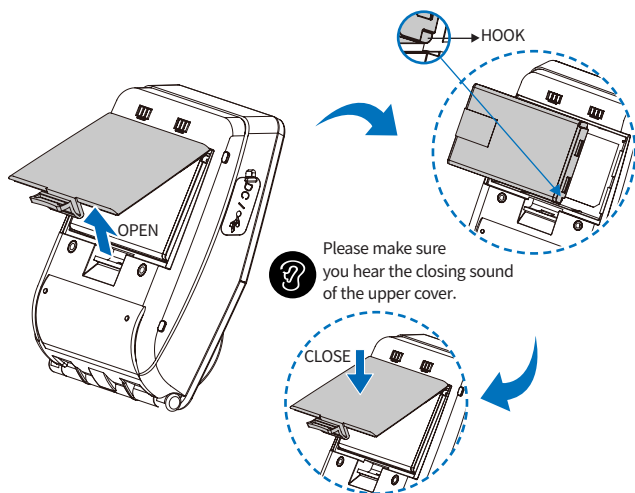


- 1 Align battery hook as shown in the picture.
- 2 Push the battery into the printer until it locks in place.

✓ NOTE

As the battery is not charged at the time of your purchase, charge the battery prior to using the printer. (Battery charger or Cradle can be used to charge)

5-3. Charging Battery

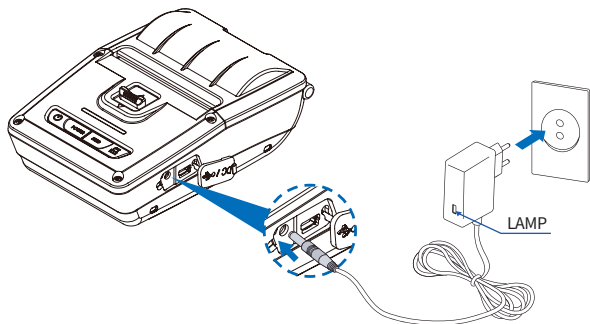

- 1 Make sure the printer is turned off.
- 2 After opening the DC JACK cover, connect the DC JACK to the printer.
- 3 Plug the power cord into the electrical outlet.


The charging status LED

Status	charging	charging complete
Charging Lamp	Red	Green

✓ NOTE

- 01 If the charger provided by the manufacturer is not used, the printer can be damaged, and the manufacturer is not liable for the consequential damage.
- 02 Before removing the battery, make sure that power is turned off.
- 03 The printer does not work when only connected to the charger.
- 04 The battery needs to be installed to operate the printer.
- 05 While charging, do not turn on the power.
- 06 Do not operate the printer while charging the battery.
- 07 Do not connect the charger while the printer is operating.


5-4. Charging Cradle Optional

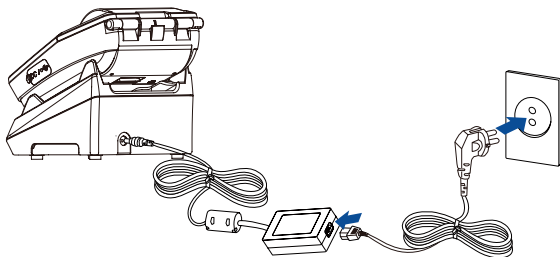

- 1 Place the printer into the charging cradle as shown above.
- 2 Connect the DC JACK to the charging cradle.
- 3 Plug the power cord into an electrical outlet.
- 4 Once the charging is completed, remove the printer from the charging cradle.

The charging status LED


Status	charging	charging complete
Charging Lamp	Red	Green

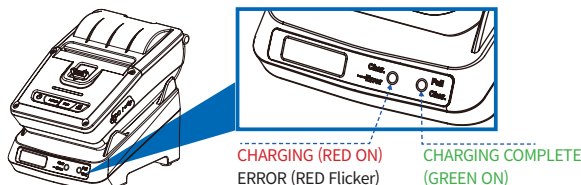

✓ NOTE


If the printer is not properly mounted on the charging cradle, the red lamp will blink. Remove and reinsert the battery.

5-5. Set Cradle Usage Optional

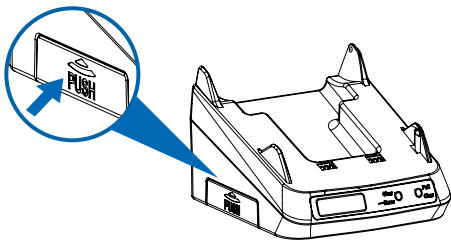


Press the PUSH button to pop out the cradle connector.

1
2

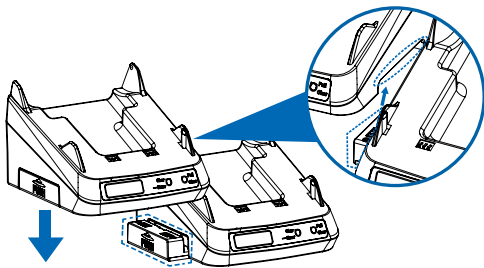

Align the second cradle with the connector of the existing cradle,
and connect the cradles by pressing down.
(To disassemble, repeat these steps in reverse order)

5-6. Battery Removal

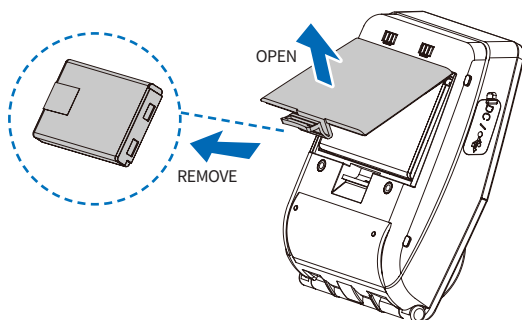


Remove the battery as shown.

5-7. Paper Roll Installation





CAUTION

Make sure to be careful of the HOT head.

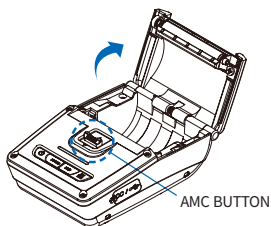

Press the AMC button down to open the paper cover.

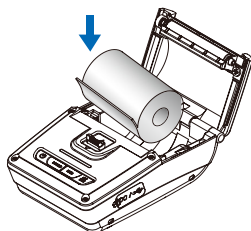


Place the paper roll as shown. Make sure the paper is placed in the right direction.

1 2
3 4



CAUTION

Please make sure you hear the closing sound of the upper cover.

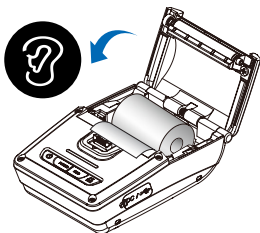

Pull a short length of paper out of the printer and close the cover.



CAUTION


If the cover is not shut down completely, the printer may not work properly.




Press the AMC button up to cut the unnecessary paper.

5-8. Belt Clip & Strap

Belt Strap+Bracket Usage

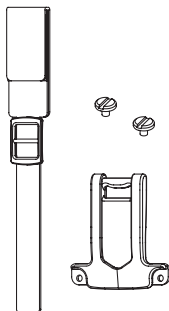


Prepare the belt strap, bracket, and 2 screws.

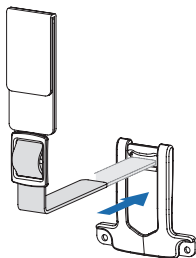


Put the strap into the hole on the top of the belt bracket.


1 2
3 4



Slide the strap into the loop on the back side.




Make sure the strap is fastened tight enough.

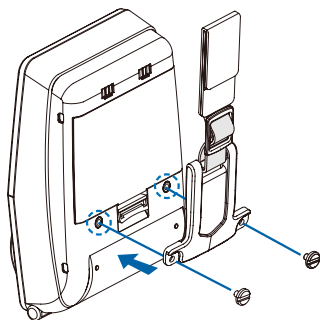


After connecting the strap and bracket, insert the screws into the bracket hole.

5
6

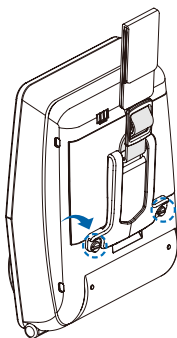


Use a screw driver to tighten the bracket.

5-9. Belt clip Usage *Optional*

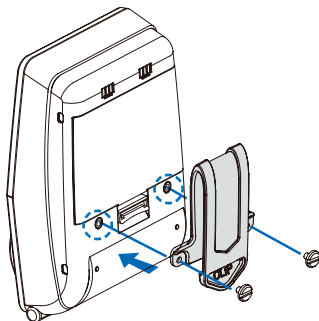


Insert the belt clip screw into the hole of the belt clip.

1
2

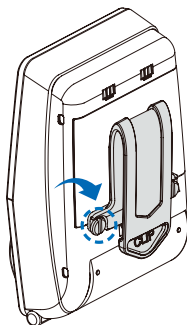


Tighten the screw with a screwdriver as shown in the picture above.

5-10. Leather Case Usage *Optional*

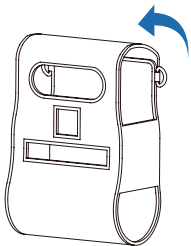


Open the leather case.

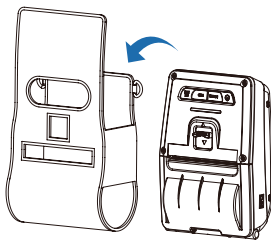


Place the printer into the leather case.

1 2
3 4

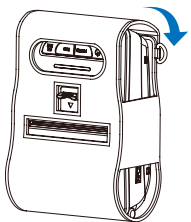


Close the cover and press down on the Velcro.

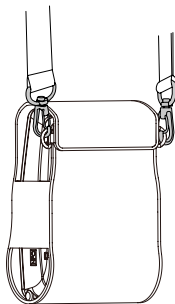


Connect the shoulder strap to leather case rings.

5-11. Self Test

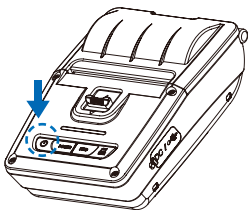


Turn off the power by pressing the power button for approximately 3 seconds.

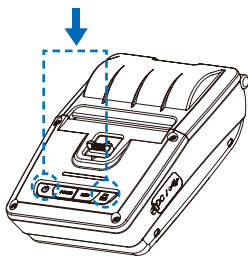

While you are holding the FEED button, press the power button.

1 2
3

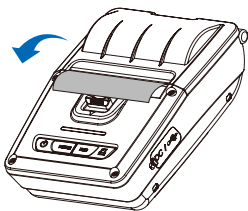

The self-test will print.

✓ NOTE

- 01 To enter hex dump mode, press the FEED button once more.
- 02 If the FEED button is not pressed, the self-test will automatically finish after 3 seconds.

Self-Test Printout Sample



SEWOO, AMC-24

Printer Configuration Info.

```
F/W Version : v2.09
FontRom Version : v1.2
BM(Adj) : 154(832)
Sensor Mode: [JOURNAL]
Battery : 7.3V(749),offset:17
Timeout(Sleep) : 60 sec
Ext' Flash : Exist
H/W Version : v2.0
SDRAM : GMB
MS Track: 1/2
Icr module : Not Installed
Linerless : Disabled
```

Emulation Configuration Info.

Emulation : ESC/POS
Print Density : Normal(0)
codepage 437
Top of Form : 0
Top Margin : 0
Left margin : 0

USB Interface

Version 2.0 Full speed
compliant
Product String : AMC-24

Bluetooth Interface

```
Version : v0174
Device Name : Mobile Printer
Mode : SPP_IAP_MODE
Pairing Info : SSP_MODE
Class Type : PRINTER_CLASS
Auto connection: Enabled
BLE : Disabled
Address : 88:6b:0f:31:b2:13
```

[illegible]

Press FEED button to
enter HEX-DUMP mode.

Upon initial installation or for troubleshooting, you can run the diagnostic test to get information about:

- Firmware version, emulation, codepage, sensor settings, interface settings. etc.

If no issues are found with the diagnostic test, examine other devices and software.


The diagnostic test is working independently of devices and software.

- ※ **Motor protection from being overheated**

To prevent the motor from overheating, stop the printer for at least 30 seconds after continuously printing 1.5 meters.

6. Peripheral Connection

This product can communicate with other devices via Bluetooth, Wi-Fi, or a communication cable.

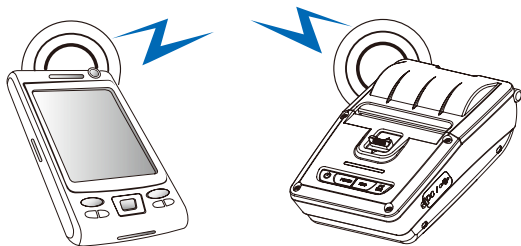

6-1. Bluetooth Connection *Optional*

- 1 The Printer can be connected to devices equipped with Bluetooth communication capabilities (PDAs, PCs, etc.).
- 2 Use the Bluetooth connection function supported by your device to connect to the printer.

✓ NOTE

- This model supports Numeric Comparison function.
- Please refer to the configuration manual for details.

6-2. Wi-Fi Connection *Optional*


- 1 The Printer can be connected to devices equipped with Wi-Fi communication capabilities (PDAs, PCs, etc.).
- 2 Use the Wi-Fi connection function supported by the device to connect to the printer.

✓ NOTE

- Please refer to the configuration manual for details.

6-3. NFC Connection Optional

The printer can be connected to devices equipped with NFC communication capabilities.

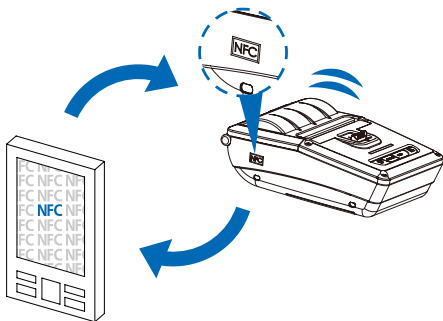


Use the NFC connection function supported by the device to connect to the printer.

✓ NOTE

- Please refer to the configuration manual for details.
- NFC is only compatible with Bluetooth.

6-4. Interface Cable Connection

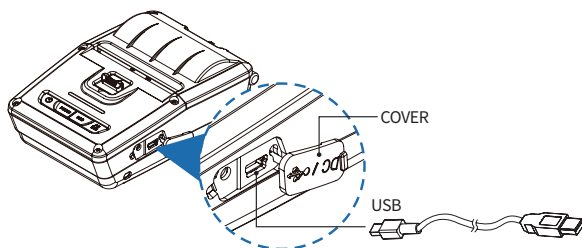

- 1 Flip over the connector cover and connect USB cable to the printer connector.

✓ NOTE

Only use cables included with the printer. (USB)


- 2 Connect the interface cable to the USB port of the device (PDA, PC, etc.).

7. Cleaning the Printer

If the interior of the printer is dusty, printing quality can be reduced. In this case, follow the instructions below to clean the printer.

✓ NOTE

- 01 Make sure to turn the printer power off prior to cleaning.
- 02 Regarding printhead cleaning, as the printhead gets very hot during printing, turn off the printer power and wait approximately 10 minutes before cleaning.
- 03 When cleaning the printhead, take care not to touch the heated portion of the printhead. The printhead can be damaged by static electricity.
- 04 Take care not to allow the printhead to become scratched and / or damaged in any way.

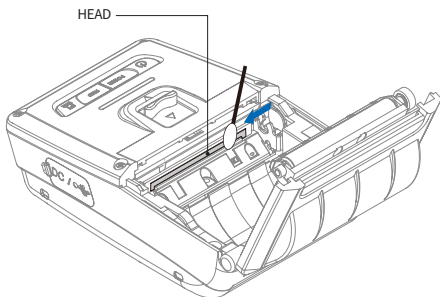


- 1 Use an applicator swab moistened with an alcohol solution to clean the printhead and remove any dust.
- 2 Once the cleaning is completed, wait a few minutes before inserting the paper roll into the printer.

✓ Preventing Overheating

To prevent the motor from overheating, stop the printer for at least 30 seconds after continuously printing 1.5 meters.

8. JAM Error

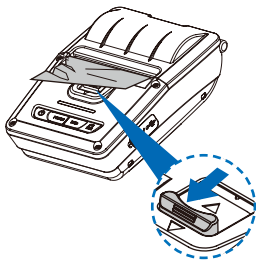


When you face with a paper jam error, please press the button down to open the printer cover.



CAUTION

Make sure to be careful of the HOT head.

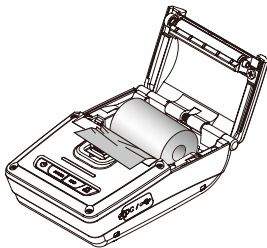

Please remove the paper.

1 2
3



NOTE

Please make sure you hear the closing sound of the upper cover.




NOTE

If the cover is not shut down completely, the printer may not work properly.



After removing, close the cover. The printer will work normally.

9. Roll Media Specification

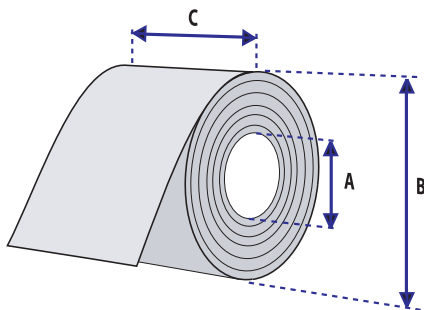


Core	
Diameter (A)	12.5 mm
Roll	
Max.Diameter (B)	40 mm
Max.Media Width (C)	58 mm
Min.Media Thickness	0.06 mm



Protect the printhead from sand, grit, and other hard particles during printing and storage. Keep the cover closed.
Even very small foreign particles may cause severe harm to the printhead.

10. Black Mark

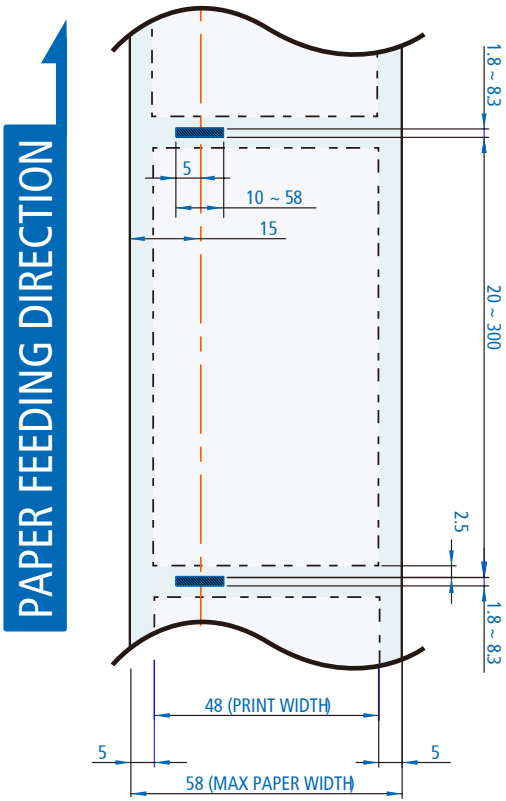

11. Printer Specification

Printing Method		Direct Thermal
Printing Speed		100mm/s
Resolution		203 DPI
Character		FontA(12x24), FontB(9x17), Font0/1/2/4/5/6/7, TTF Font0, FontA~H, FontGS Font1~8, Asian Font(KOR, JPN, CHN_GB2312, CHN_BIG5), Resident TTF, Downloadable TTF, Downloadable Bitmap
Barcode	1D	EAN-8, EAN-8(+2+5), EAN-13, EAN-13(+2+5), Codabar, Code11, Code39, Code93, Code128, ITF, UPC-A(+2+5), UPC-E, UPC-E(+2+5), Planet, etc
	2D	QR, PDF417, MicroPDF417, Maxicode, Datamatrix, Aztec, RSS14, TLC39
Emulation		ESC/POS, CPCL, ZPL Command compatible
Driver		Windows Driver(XP ~, Server2003 ~), Window CE & Mobile Driver & SDK (CE 4.2~, Mobile 5.0~), Linux Driver, Mac Driver, OPOS Driver, JavaPOS Driver, iOS SDK, Android(6.0 ~) SDK
Sensor		Black mark, Cover open, Paper end
Paper	Paper type	Thermal Receipt
	Width	58mm
	Thickness	0.06 mm
	Roll Max Diameter	Max. Ø 40mm
	Roll Core	12.5mm ± 0.5mm

Interface	Standard	USB
	Option	Wi-Fi(802.11a/b/g/n), Bluetooth Smart Ready(Bluetooth4.2+BLE + NFC Tag)
Battery Charger	Input	AC100 ~ 240V, 50 / 60Hz
	Output	8.4V, 800 ~ 1400mA
Battery	Battery type	Li-ion
	Output	7.4V, 1450mAh
	Charging time	1.7Hrs (36Hrs stand-by)
Cutter		AMC(Advanced Manual Cutter)
Size (W x L x D)		81.5 x 121.4 x 45.3 mm
IP		IP43
Weight		264.1g (with battery)
Temperature	Operation	-10 ~ 50°C
	Storage	-20 ~ 60°C
Humidity	Operation	10 ~ 80%
	Storage	10 ~ 90%

12. Utilities

The following utilities and concerned manual can be found on the QR or homepage.

No.	Name	Description
1	PrinterGear	This is an integrated utility that you can manage your printer with below tasks. - Printer Configuration Settings - Wireless-Lan Settings - Font(Bitmap/TrueType) Download - Printing service - Document management - FW Download - Maintenance ※Please refer to PrinterGear Manual for detailed information.
2	LabelMaker(CPCL)	This program is for label form design and designed label printing.
3	Android Utility (Sewoo M_Utility) (ESC/POS)	It is a utility app that prints text, barcodes, images, etc. through Bluetooth and Wi-Fi communication, and able to printer settings.

13. S/W

We provides SDK, Driver, etc. as follows to respond to various S/W usage environments.

You can download this S/W from the homepage.

No	Name	Description
1	Windows Driver	This is an install program used to print a Mobile printer in Windows OS.
2	Linux Driver	This is the Cups Driver used to print a Mobile printer in the Linux environment.
3	OPOS Driver (ESC/POS)	This is a driver that controls Mobile printers using the OPOS standard. It can be used after initial setting(Mobile Printer&MSR) using the setting tool.
4	JavaPOS Driver (ESC/POS)	JavaPOS driver is an interface standard for POS software written in Java, and can be used in Mobile Printer when printing a receipt.
5	Mac Driver	This is the Cups Driver used to print a Mobile printer in the Mac OS environment.
6	Android Plugin (Sewoo Print Service Plugin) (ESC/POS)	This is a print service plug-in that allows you to print documents, images, and web pages without installing additional apps.
7	Windows SDK	This is library for communication and data output with Mobile printer in Windows OS.
8	Android SDK	This is library for communication and data output with Mobile printers in Android OS.
9	iOS SDK	This is library for communication and data output with Mobile printers in iOS.

- Model Name (SBT-M2)
- Manufacturer (Aroot CO.,Ltd.)
- Manufacturing Origin (Made in Korea)
- ANATEL ID (Anatel: 03359-25-16538)

1. Incorpora produto homologado pela Anatel sob número 03359-25-16538
2. Este equipamento não tem direito à proteção contra interferência prejudicial e não pode causar interferência em sistemas devidamente autorizados.
ANATEL website: <https://www.gov.br/anatel/pt-br/>



- Model Name (SWF-I3)
- Manufacturer (Aroot CO.,Ltd.)
- Manufacturing Origin (Made in Korea)
- ANATEL ID (Anatel: 04208-25-16538)

1. Incorpora produto homologado pela Anatel sob número 04208-25-16538
2. Este equipamento não tem direito à proteção contra interferência prejudicial e não pode causar interferência em sistemas devidamente autorizados.
ANATEL website: <https://www.gov.br/anatel/pt-br/>



CAUTION

To prevent hazards. Do not expose the high temperature above 60 C(140 F). Do not disassemble, crush, throw, puncture, modify;dispose of properly. Do not short-circuit;allow metal object to contact the Battery terminals. Do not dispose of in fire or water, moisture or caustic environments. Excessive impact may cause the unit to malfunction.



QR Page